



## Pocket Cinema 4K | 6K | 6K Pro

## Main Mode



- 1. Autofocus and Exposure reading.
- 2. This button starts or ends the Video Recording (Rec).
- 3. Photo Shoot.
- 4. Aperture -.
- 5. Aperture +.
- 6. Shutter Speed -.
- 7. Shutter Speed +.
- **8.** ISO +
- **9.** ISO -.

Press the buttons 4,5,6,7,8,9 once to change by one step. Keep pressed to quickly change the chosen parameter.

**10.** Switch Mode, allows you to change the function of each button. The switch mode is indicated by a blue LED switched on.

Keep the button pressed for 3 seconds, on the monitor you can access to the housing's menu. A purple LED lights up when menu navigation is active. To navigate, follow the numbering of the buttons in this manual. To exit to the menu mode, press button 11 "on / off".

**11.** On/Off housing and camera. To switch on, keep the button pressed until the housing monitor is switched on (Easydive logo).

It is possible to turn off or on only the camera, by pressing once quickly. To turn off both the housing and the camera, keep the button pressed until it turns off.



Front



Back

Button Panel LeoR





## Pocket Cinema 4K | 6K | 6K Pro

## Switch Mode

**Blue Led Actived** 



- 1. Autofocus and Exposure reading.
- 2. This button starts or ends the Video Recording (Rec).
- **3.** Change video resolution. The available presets can be selected via the dedicated app.
- 4. Button for Manual White Balance (WB Custom).
- **5.** Preset White Balance (2500K 3200K 4000K 4500K 5500K 6500K 7500K 8500K 10000K).
- 6. Focus Assist (Low Medium High Off).
- 7. Zebra Exposure (75% 100% Off).
- 8. False Color on/off.
- 9. In 6K Pro, activation and scrolling of ND filters.
- **10.** Switch Mode, allows you to change the function of each button. The switch mode is indicated by a blue LED switched on.

Keep the button pressed for 3 seconds, on the monitor you can access to the housing's menu. A purple LED lights up when menu navigation is active. To navigate, follow the numbering of the buttons in this manual. To exit to the menu mode, press button 11 "on / off".

**11.** On/Off housing and camera. To switch on, keep the button pressed until the housing monitor is switched on (Easydive logo).

It is possible to turn off or on only the camera, by pressing once quickly. To turn off both the housing and the camera, keep the button pressed until it turns off.







Back

Button Panel LeoR