

Right Hand Control

leo³

1. Autofocus (Exposure Reading) and Shutter Release Mode. To change the shooting mode, hold down Button 1 until the Red LED is switched on (15 sec.). In Video Mode becomes the x5 / x10 zoom of the focus point.

2. Photo Shoot:

Mode 1: When you press the button you have the autofocus, when you release the button you will have the shoot (Default Setting).

Mode 2: When you press the button first you have the autofocus and then the shoot. (If the lens is already in focus you will have the direct shoot).

3. Change Mode (M/Av/Tv/P). Insert the Camera in Mode M.

Buttons 4,5,6,7 Change function depending in which Mode is setted the Camera.

Manual Mode (M):	Shutter - Priority (Tv):	Aperture - Priority (Av):
4. Aperture -	4. EV -	4. Aperture -
5. Aperture +	5. EV +	5. Aperture +
6. Shutter Speed -	6. Shutter Speed -	6. EV -
7. Shutter Speed +	7. Shutter Speed +	7. EV +

8. ISO +

9. ISO -

Press the buttons 4,5,6,7,8,9 once to change by one step. Keep pressed to quickly change the chosen parameter.

10. On / Off electronic board (to switch on press once, to switch off hold down about 3 seconds until the board is switched off). The camera will go in Standby limiting the power consumption. To activate the Camera, after switch on the electronic card, press the Button 2.

Canon

5D MK IV | 5D MK III | 5D MK II | 5D | 5Ds | 6D MK II | 6D |
7D MK II | 7D | 90D | 80D | 77D | 70D | 60D | 50D | 40D |
30D | 20D | 10D | 800D | 760D | 750D | 700D | 650D |
600D | 550D | 500D | 450D | 400D | 350D 300D | 250D |
200D | 100D | 2000D | 4000D | 1300D | 1200D |
1100D | 1000D



Front

Back

Left Hand Control

leo³

1. Start and Stop Record Video.
2. Autofocus Video Mode (Keep Hold until the lens find the focus).
3. Change Autofocus Mode*:
 - Photo Mode: One-shot AF | Ai Focus AF | Ai Servo AF | Remote Manual.
 - Video Mode: Quick Mode | Live Mode | Face Detect | Remote Manual.
4. Video Mode, Live View Video activation and video button functions. To return to Photo mode, press the button 4 again.
5. Change Preset White Balance (Auto | Incandescent | Fluorescent | Direct Sunlight | Flash | Cloudy | Shade). In Video Mode, Custom WB available by press Button 8.
6. Manual Focus -.
7. Manual Focus +.
8. Change Metering Mode (Matrix Center - Average - Spot). In Video Mode, Push Custom WB
9. Change Drive Mode: Single Shoot | Cont.Low | Cont.High | Self-timer 10 sec | Self-timer 2 sec.**
10. On / Off electronic board (to switch on press once, to switch off hold down about 3 seconds until the board is switched off). The camera will go in Standby limiting the power consumption. To activate the Camera, after switch on the electronic card, press the Button 2.

* Not available for 7D - Photo Mode not available for 5D Mk II

** The mode can be changed with the model of the camera.

Canon

5D MK IV | 5D MK III | 5D MK II | 5D | 5Ds | 6D MK II | 6D | 7D MK II | 7D | 90 D | 77D | 70D | 60D | 50D | 40D | 30D | 20D | 10D | 800D | 760D | 750D | 700D | 650D | 600D | 550D | 500D | 450D | 400D | 350D | 300D | 250D | 200D | 100D | 2000D | 4000D | 1300D | 1200D | 1100D | 1000D



Back

Hand Control - Left

Front