

Right Hand Control

leo³

1. Autofocus (Exposure Reading) and Shutter Release Mode. To change the shooting mode, hold down Button 1 until the Red LED is switched on (15 sec.).

2. Photo Shoot:

Mode 1: When you press the button you have the autofocus, when you release the button you will have the shoot (Default Setting).

Mode 2: When you press the button first you have the autofocus and then the shoot. (If the lens is already in focus you will have the direct shoot).

If you use the camera in Video mode *, you can take Photos in the Selected Video format.

3. Change Mode (M/Av/Tv/P). Insert the Camera in Mode M.**

Manual Mode (M):

Shutter - Priority (Tv):

Aperture - Priority (Av):

4. Aperture -

4. EV -

4. Aperture -

5. Aperture +

5. EV +

5. Aperture +

6. Shutter Speed -

6. Shutter Speed -

6. EV -

7. Shutter Speed +

7. Shutter Speed +

7. EV +

8. ISO +

Press the buttons 4,5,6,7,8,9 once to change by one step. Keep

9. ISO -

pressed to quickly change the chosen parameter.

10. On / Off electronic board (to switch on press once, to switch off hold down about 3 seconds until the board is switched off). The camera will go in Standby limiting the power consumption. To activate the Camera, after switch on the electronic card, press the Button 2.

* **Video Mode must be selected Manually before placing the camera in the housing.**

** **“Change Mode” Available ONLY with our Monitor EasyVision.**



Front

Hand Control - Right

Back

Left Hand Control



1. Autofocus Mode (AF-S / AF-C / MF)
2. In Photo Mode, Drive Mode.
In Video Mode *, start and stop Recording (REC).
3. Metering Mode.
4. Shift Focus Point, It allows you to select the next point of focus.
5. Mode Area AF.
6. Change Format DX | FX.
7. Change Resolution Photo or Video, according to the active modality.
8. In Photo Mode Flash Sync Mode, in Video Mode Picture Control Preset.
9. Change Preset White Balance (WB).
(Auto | Incandescent | Fluorescent | Direct Sunlight | Flash | Cloudy | Shade).
10. On / Off electronic board (to switch on press once, to switch off hold down about 3 seconds until the board is switched off). The camera will go in Standby limiting the power consumption. To activate the Camera, after switch on the electronic card, press the Button 2.



Back

Hand Control - Left

Front

* Video Mode must be selected Manually before placing the camera in the housing.

PAY ATTENTION: Remove the Viewfinder adapter to properly close the Housing.