

Right Hand Control

leo³

1. Autofocus (Exposure Reading) and Shutter Release Mode. To change the shooting mode, hold down Button 1 until the Red LED is switched on (15 sec.).

2. Photo Shoot:

Mode 1: When you press the button you have the autofocus, when you release the button you will have the shoot (Default Setting).

Mode 2: When you press the button first you have the autofocus and then the shoot. (If the lens is already in focus you will have the direct shoot).

3. Change Mode (M/Av/Tv/P). Insert the Camera in Mode M.

Manual Mode (M):

Shutter - Priority (Tv):

Aperture - Priority (Av):

4. Aperture -

4. EV -

4. Aperture -

5. Aperture +

5. EV +

5. Aperture +

6. Shutter Speed -

6. Shutter Speed -

6. EV -

7. Shutter Speed +

7. Shutter Speed +

7. EV +

8. ISO +

Press the buttons 4,5,6,7,8,9 once to change by one step. Keep

9. ISO -

pressed to quickly change the chosen parameter.

10. On / Off electronic board (to switch on press once, to switch off hold down about 3 seconds until the board is switched off). The camera will go in Standby limiting the power consumption. To activate the Camera, after switch on the electronic card, press the Button 2.



Front

Hand Control - Right

Back

Left Hand Control



1. Autofocus (Exposure Reading) and Shutter Release Mode. To change the shooting mode, hold down Button 1 until the Red LED is switched on (15 sec.).

2. Photo Shoot:

Mode 1: When you press the button you have the autofocus, when you release the button you will have the shoot (Default Setting).

Mode 2: When you press the button first you have the autofocus and then the shoot. (If the lens is already in focus you will have the direct shoot).

3. Change Format 4/3 or 16/9.

4. Autofocus Mode (AF-S / AF-C / M)

5. Mode Area AF.

6. No associated function.

7. Metering Mode.

8. No associated function.

9. No associated function.

10. On / Off electronic board (to switch on press once, to switch off hold down about 3 seconds until the board is switched off). The camera will go in Standby limiting the power consumption. To activate the Camera, after switch on the electronic card, press the Button 2.



Back

Hand Control - Left

Front