

## Main Mode

leo<sup>3</sup> wi

1. Autofocus (Exposure Reading) and Shutter Release Mode. To change the shooting mode, hold down Button 1 until the Red LED is switched on (15 sec.).
2. Photo Shoot:  
Mode 1: When you press the button you have the autofocus, when you release the button you will have the shoot (Default Setting).  
Mode 2: When you press the button first you have the autofocus and then the shoot. (If the lens is already in focus you will have the direct shoot).
3. This button starts or ends the Video Recording (REC)\*.  
The following buttons are enabled in Manual Mode (M). The mode selection must be done before inserting the camera into the Housing. If you choose another mode, only manually set functions are available.
  4. Aperture -
  5. Aperture +
  6. Shutter Speed -
  7. Shutter Speed +
8. ISO -
9. ISO +
10. Switch Mode, allows you to change the function of each button. The mode switch is indicated by a blue LED switched on.
11. On electronic board. To switch on, press until the red LED of the electronics is activated. Shutdown is disabled to preserve Wi-Fi connection. The Camera Monitor will automatically turn off according to the Standby Time set. Press button 2 to re-activate the monitor.

\* In the "GX" and "G" series, the monitor is obscured after 30 sec. recording. Stop recording to re-activate the monitor.



Button Panel Leo3 Wi

## Switch Mode Blue Led Activated

leo<sup>3</sup> wi

1. Autofocus (Exposure Reading) and Shutter Release Mode. To change the shooting mode, hold down Button 1 until the Red LED is switched on (15 sec.).
2. Photo Shoot:  
Mode 1: When you press the button you have the autofocus, when you release the button you will have the shoot (Default Setting).  
Mode 2: When you press the button first you have the autofocus and then the shoot. (If the lens is already in focus you will have the direct shoot).
3. Allows you to change the video resolution, among the resolutions available\*.
4. Exposure Compensation + (EV +).
5. Exposure Compensation - (EV -).
6. Change Metering Mode (Matrix Center - Average - Spot).
7. Change Autofocus Mode (AF-S | AF-C).
8. P-Style Button, change Preset Filters (Black and White, Natural, Vivid Colors, ecc...).
9. Change Preset White Balance (Auto | Incandescent | Fluorescent | Direct Sunlight | Flash | Cloudy | Shade).
10. Switch Mode, allows you to change the function of each button. The mode switch is indicated by a blue LED switched on.
11. On electronic board. To switch on, press until the red LED of the electronics is activated. Shutdown is disabled to preserve Wi-Fi connection. The Camera Monitor will automatically turn off according to the Standby Time set. Press button 2 to re-activate the monitor.

\* Available video resolutions depend on the camera model.



Button Panel Leo3 Wi